


BENUTZERHANDBUCH FÜR DAS FALTBARE E-PIANO

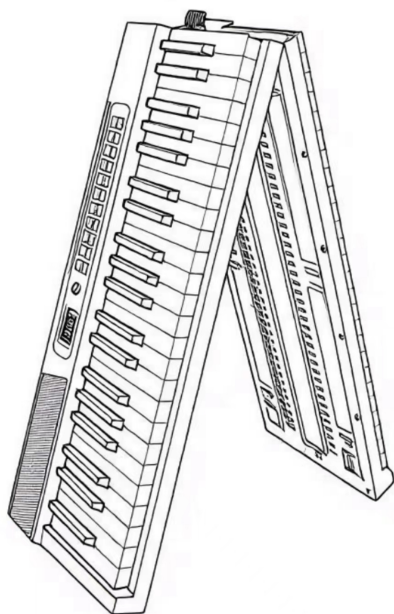



Funktionsübersicht

Vielen Dank, dass Sie dieses digitale Klavier von unserem Unternehmen erworben haben. Dieses Produkt ist elegant und exquisit und stellt eine perfekte Kombination aus moderner elektronischer Technologie und traditionellen Musikinstrumenten dar.

- Bevor Sie dieses Instrument verwenden, lesen Sie bitte dieses Handbuch sorgfältig durch.



Instrumentparameter

Tasten: 88-Tasten Standard-Tastatur	Lautsprecher: 5W * 2
Tonumfang: A1 ~ C9	Stromversorgung: 5V 2A, Typ-C-Schnittstelle
Modell: Klappbares Klavier	

- Tastatur: 88 Standardtasten (einschließlich schwarzer Tasten).
- Tonumfang: A1 - C9
- Töne: 1000 Töne
- Rhythmen: 1000 Rhythmen
- Demolieder: 200
- Funktionen: Rhythmusfunktion, Demolieder-Funktion, Aufnahme- und Wiedergabefunktion, Dual-Klavier-Funktion, Dual-Ton-Funktion, Akkord-Funktion, Metronom-Funktion, Keyboard-Drum-Funktion.
- Hardware: 64 Akkorde, mit 2-Kanal 16-Bit DAC-Ausgang, eingebautem Verstärkerschaltkreis.
- Ausgangsfunktion: Drei-stelliges digitales Display.
- Sustain-Pedal.

Hinweis!

- Dieses Produkt ist ein elektronisches Instrument. Es ist ein normales Phänomen, dass nach dem Einschalten ein kleines Stromgeräusch im Lautsprecher oder Kopfhörer zu hören ist. Bitte halten Sie sich von allen Quellen der Funkstörung fern, wie z.B. "Radios, Fernseher, Antennenempfänger, Router, Kühlschränke, elektrische Geräte mit Motoren, usw.




Liste

Funktionsübersicht	1
Liste	2
Panel-Diagramm und Funktionsbedienungsanleitung	3
Tonart-Tabelle	5
Rhythmus-Tabelle	11
Demolieder	18
Produktpflege	20
Sicherheitsvorkehrungen	21




Schaltplan des Panels und Funktionsanweisungen

Funktionspanel

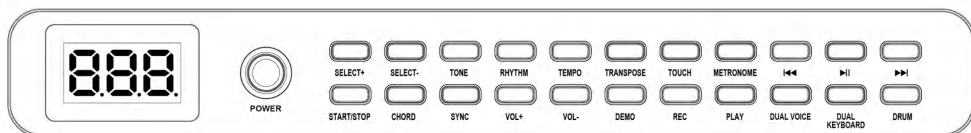

Hintere Anschlüsse

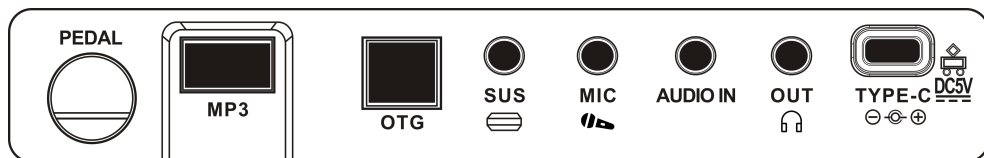

Bedienungsanleitung:

■ Spiel Modus (Tone Mode):

Wenn das Gerät eingeschaltet wird, geht es automatisch in den Spiel Modus (Tone Mode).

Drücken Sie [+] und [-], um den gespielten Ton auszuwählen.

Drücken Sie [+] und [-] für mehr als 1 Sekunde, um die Töne kontinuierlich auszuwählen.

Der Tonbereich reicht von 0 bis 999.

■ Rhythmus Modus (Rhythm Mode):

Drücken Sie [Start/Stop]/[Rhythm], um in den Rhythmusmodus zu wechseln und einen Rhythmus zu spielen.

Drücken Sie [+] und [-], um Rhythmus-Spuren auszuwählen, der Bereich reicht von 0 bis 999.

Drücken Sie [+] und [-] für mehr als 1 Sekunde, um Rhythmen schnell auszuwählen.

Drücken Sie [Sync], um die Rhythmuswiedergabe durch Drücken der Klaviertasten zu starten.

Drücken Sie [Insert], um einen neuen Rhythmus basierend auf dem ursprünglichen Rhythmus einzufügen.

In diesem Modus drücken Sie [Tone], dann [+] und [-], um die Töne zu wechseln. Um den Rhythmus zu wechseln, drücken Sie [Rhythm].

■ Demolied Modus (Demo Song Mode):

Drücken Sie die [Demo Song]-Taste, um alle Demolieder abzuspielen, und drücken Sie die [Start/Stop]-Taste, um die Demolieder anzuhalten.

Drücken Sie [+] und [-], um Demolieder auszuwählen, die Titel reichen von 0 bis 199. Drücken Sie [+] und [-] für mehr als 1 Sekunde, um Demolieder schnell auszuwählen.

In diesem Modus drücken Sie die [Tone]-Taste, dann [+] und [-], um die Töne zu wechseln. Um die Demolieder zu wechseln, drücken Sie die [Demo Song]-Taste.

■ Aufzeichnungsfunktionen (Recording related functions):

Drücken Sie die [Record]-Taste, um in den Aufnahme-Modus zu wechseln. Das digitale Display zeigt [REC] an.

Die Aufnahmefunktion nutzt die Multi-Channel-Echtzeitaufnahme, um Noten aufzunehmen.



Funktionsbedienungsanweisungen

> Nach dem Eintritt in den Aufnahmemodus kann der Benutzer beliebig die Tasten spielen, und das System wird die gespielten Tasten genau aufzeichnen. Drücken Sie die [Play]-Taste, um die Wiedergabefunktion zu aktivieren, aber diese Wiedergabefunktion ist nur gültig, wenn Noten aufgenommen wurden. Nach dem Ende der Wiedergabe kehrt das System automatisch zum ursprünglichen Zustand zurück.

> Nach einer erneuten Aufnahme und Systemrücksetzung werden die aufgenommenen Noten automatisch aktualisiert.

■ Dual-Keyboard-Modus (Dual Keyboard Mode)

> Drücken Sie die [Dual Keyboard]-Taste, um den Dual-Klavier-Modus ein- oder auszuschalten.

> In diesem Modus wird der Bereich der Tasten in zwei Intervalle unterteilt: A2-B5 und C4-C8.

■ Dual-Ton-Modus (Dual Tone Mode)

> Drücken Sie die [Dual Tone]-Taste, um den Dual-Ton-Modus ein- oder auszuschalten.

> In diesem Modus wird durch Drücken einer Klaviertaste die Kombination des aktuellen Tons (Vordergrund) + Klaviertons (Hintergrund) gespielt.

> In diesem Modus drücken Sie die [Tone]-Taste, und dann [+] und [-], um den Vordergrundton zu wechseln.

■ Akkord-Modus (Chord Mode)

> Wenn das System den Rhythmus abspielt, drücken Sie die [Single Finger Chord]-Taste, um in den Akkordmodus mit einem Finger zu wechseln.

> Akkord-Funktion: Drücken Sie die Tasten im Bereich von A1 bis F#4, um die Akkorde zu spielen, die dem Rhythmus entsprechen, und die Tonhöhe der Akkorde ändert sich mit der Tonhöhe der Tasten.

> Im Akkordmodus drücken Sie die [Single Finger Chord]-Taste, um die Akkorde zu deaktivieren.

■ Velocity-Kontrollfunktion (Velocity Control Function)

> Drücken Sie die [Velocity]-Taste, um die Velocity ein- oder auszuschalten, und die Velocity ist aktiviert, wenn das Gerät eingeschaltet wird.

■ Geschwindigkeitssteuerung (Speed Control Function)

> Verwenden Sie [Speed], dann drücken Sie [+] und [-], um die Geschwindigkeit zu beschleunigen/verzögern. Kurzes Drücken erhöht oder verringert die Geschwindigkeit jeweils um 1, langes Drücken beschleunigt oder verlangsamt schnell.

> Der Geschwindigkeitsbereich reicht von 40 bis 280, und der voreingestellte Wert nach dem Einschalten ist 120.

> Wenn das ausgewählte Lied gespielt wird, ist das Tempo des Liedes entscheidend.

> Wenn der ausgewählte Rhythmus gespielt wird, ist das Tempo des Rhythmus entscheidend.

■ USB-MIDI-IN-OUT-Funktion

> Verbinden Sie das Gerät über ein USB-Kabel mit einem Computer oder Tablet für Multimedia-Interaktionen.

■ Weitere Funktionen

> Drücken Sie [Volume-], um die Wiedergabelautstärke zu verringern, und drücken Sie [Volume+], um die Wiedergabelautstärke zu erhöhen. Der Bereich reicht von 0 bis 16.

> Im Spielmodus drücken Sie die [Transpose]-Taste, und dann [+] und [-], um den Bereich der aktuellen Tonart zu ändern (-6 bis +6).

> Das Metronom ist eine Schlagzählerhilfe. Drücken Sie die [Metronome]-Taste, um zwischen den Schlagarten zu wechseln. Das Metronom bietet 4 Varianten: 1/4 Schlag, 2/4 Schlag, 3/4 Schlag, 4/4 Schlag.

> Drücken Sie die [Keyboard Drum]-Taste, um direkt zum Klavierdrum-Sound zu wechseln.

> Wenn Bluetooth verbunden ist oder ein USB-Stick eingesteckt wird (mit Liedern auf dem USB-Stick), drücken Sie kurz [Previous], um das vorherige Lied abzuspielen, drücken Sie kurz [Next], um das nächste Lied abzuspielen, halten Sie [Previous] gedrückt, um die Lautstärke des Liedes zu verringern, und halten Sie [Next] gedrückt, um die Lautstärke zu erhöhen. Drücken Sie die [Play]-Taste, um das Audio abzuspielen, und drücken Sie sie erneut, um das Audio während der Wiedergabe zu pausieren.

> Im Ladezustand leuchtet die Ladebuchse rot; wenn das Gerät vollständig aufgeladen ist, leuchtet die Anzeige an der Ladebuchse grün.



Ton-Liste - 1000 Arten							
0	Piano 1	39	Synth Bass 2	78	Whistle	117	Melodic Tom
1	Piano 2	40	Violin	79	Ocarina	118	Synth Drum
2	Piano 3	41	Viola	80	Lead 1 (square)	119	Reverse Cymbal
3	Honky-Tonk Piano	42	Cello	81	Lead 2 (sawtooth)	120	Guitar Fret Noise
4	Rhodes Piano	43	Contrabass	82	Lead 3 (calliope lead)	121	Breath Noise
5	Chorused Piano	44	Tremolo Strings	83	Lead 4 (chiff lead)	122	Seashore
6	Harpsichord	45	Pizzicato Strings	84	Lead 5 (charang)	123	Bird Tweet
7	Clavinet	46	Orchestral Harp	85	Lead 6 (voice)	124	Telephone Ring
8	Celesta	47	Timpani	86	Lead 7 (fifths)	125	Helicopter
9	Glockenspiel	48	String Ensemble 1	87	Lead 8 (bass lead)	126	Applause
10	Music Box	49	String Ensemble 2	88	Pad 1 (new age)	127	Gun shot
11	Vibraphone	50	SynthStrings 1	89	Pad 2 (warm)	128	Piano 1
12	Marimba	51	SynthStrings 2	90	Pad 3 (poly synth)	129	Piano 2
13	Xylophone	52	Choir Aahs	91	Pad 4 (choir)	130	Piano 3
14	Tubular Bells	53	Voice Oohs	92	Pad 5 (bowed)	131	Honky Tonk Piano
15	Santur	54	Synth Voice	93	Pad 6 (metallic)	132	Rhodes Piano
16	Hammond Organ	55	Orchestra Hit	94	Pad 7 (halo)	133	Chorused Piano
17	Percussive Organ	56	Trumpet	95	Pad 8 (sweep)	134	Harpsichord
18	Rock Organ	57	Trombone	96	FX 1 (rain)	135	Clavinet
19	Church Organ	58	Tuba	97	FX 2 (soundtrack)	136	Celesta
20	Reed Organ	59	Muted Trumpet	98	FX 3 (crystal)	137	Glockenspiel
21	Accordion	60	French Horn	99	FX 4 (atmosphere)	138	Music Box
22	Harmonica	61	Brass Section	100	FX 5 (brightness)	139	Vibraphone
23	Bandoneon	62	Synth Brass 1	101	FX 6 (goblins)	140	Marimba
24	Acoustic Guitar (nylon)	63	Synth Brass 2	102	FX 7 (echoes)	141	Xylophone
25	Acoustic Guitar(steel)	64	Soprano Sax	103	FX 8 (sci fi)	142	Tubular Bells
26	Electric Guitar (jazz)	65	Alto Sax	104	Sitar	143	Santur
27	Electric Guitar (clean)	66	Tenor Sax	105	Banjo	144	Hammond Organ
28	Electric Guitar (muted)	67	Baritone Sax	106	Shamisen	145	Percussive Organ
29	Overdriven Guitar	68	Oboe	107	Koto	146	Rock Organ
30	Distortion Guitar	69	English Horn	108	Kalimba	147	Church Organ
31	Guitar Harmonics	70	Bassoon	109	Bagpipe	148	Reed Organ
32	Acoustic Bass	71	Clarinet	110	Fiddle	149	Accordion
33	Electric Bass(finger)	72	Piccolo	111	Shanai	150	Harmonica
34	Electric Bass(pick)	73	Flute	112	Tinkle Bell	151	Bandoneon
35	Fretless Bass	74	Recorder	113	Agogo	152	Acoustic Guitar (nylon)
36	Slap Bass 1	75	Pan Flute	114	Steel Drums	153	Acoustic Guitar(steel)
37	Slap Bass 2	76	Bottle Blow	115	Woodblock	154	Electric Guitar (jazz)
38	Synth Bass 1	77	Skakuhachi	116	Taiko Drum	155	Electric Guitar (clean)



Ton-Liste - 1000 Arten					
156	Electric Guitar (muted)	195	Baritone Sax	234	Shamisen
157	Overdriven Guitar	196	Oboe	235	Koto
158	Distortion Guitar	197	English Horn	236	Kalimba
159	Guitar Harmonics	198	Bassoon	237	Bagpipe
160	Acoustic Bass	199	Clarinet	238	Fiddle
161	Electric Bass(finger)	200	Piccolo	239	Shanai
162	Electric Bass(pick)	201	Flute	240	Tinkle Bell
163	Fretless Bass	202	Recorder	241	Agogo
164	Slap Bass 1	203	Pan Flute	242	Steel Drums
165	Slap Bass 2	204	Bottle Blow	243	Woodblock
166	Synth Bass 1	205	Skakuhachi	244	Taiko Drum
167	Synth Bass 2	206	Whistle	245	Melodic Tom
168	Violin	207	Ocarina	246	Synth Drum
169	Viola	208	Lead 1 (square)	247	Reverse Cymbal
170	Cello	209	Lead 2 (sawtooth)	248	Guitar Fret Noise
171	Contrabass	210	Lead 3 (calliope lead)	249	Breath Noise
172	Tremolo Strings	211	Lead 4 (chiff lead)	250	Seashore
173	Pizzicato Strings	212	Lead 5 (charang)	251	Bird Tweet
174	Orchestral Harp	213	Lead 6 (voice)	252	Telephone Ring
175	Timpani	214	Lead 7 (fifths)	253	Helicopter
176	String Ensemble 1	215	Lead 8 (bass lead)	254	Applause
177	String Ensemble 2	216	Pad 1 (new age)	255	Gun shot
178	SynthStrings 1	217	Pad 2 (warm)	256	Piano 1
179	SynthStrings 2	218	Pad 3 (poly synth)	257	Piano 2
180	Choir Aahs	219	Pad 4 (choir)	258	Piano 3
181	Voice Oohs	220	Pad 5 (bowed)	259	Honky Tonk Piano
182	Synth Voice	221	Pad 6 (metallic)	260	Rhodes Piano
183	Orchestra Hit	222	Pad 7 (halo)	261	Chorused Piano
184	Trumpet	223	Pad 8 (sweep)	262	Harpichord
185	Trombone	224	FX 1 (rain)	263	Clavinet
186	Tuba	225	FX 2 (soundtrack)	264	Celesta
187	Muted Trumpet	226	FX 3 (crystal)	265	Glockenspiel
188	French Horn	227	FX 4 (atmosphere)	266	Music Box
189	Brass Section	228	FX 5 (brightness)	267	Vibraphone
190	Synth Brass 1	229	FX 6 (goblins)	268	Marimba
191	Synth Brass 2	230	FX 7 (echoes)	269	Xylophone
192	Soprano Sax	231	FX 8 (sci-fi)	270	Tubular Bells
193	Alto Sax	232	Sitar	271	Santur
194	Tenor Sax	233	Banjo	272	Hammond Organ
				273	Percussive Organ
				274	Rock Organ
				275	Church Organ
				276	Reed Organ
				277	Accordion
				278	Harmonica
				279	Bandoneon
				280	Acoustic Guitar (nylon)
				281	Acoustic Guitar(steel)
				282	Electric Guitar (jazz)
				283	Electric Guitar (clean)
				284	Electric Guitar (muted)
				285	Overdriven Guitar
				286	Distortion Guitar
				287	Guitar Harmonics
				288	Acoustic Bass
				289	Electric Bass(finger)
				290	Electric Bass(pick)
				291	Fretless Bass
				292	Slap Bass 1
				293	Slap Bass 2
				294	Synth Bass 1
				295	Synth Bass 2
				296	Violin
				297	Viola
				298	Cello
				299	Contrabass
				300	Tremolo Strings
				301	Pizzicato Strings
				302	Orchestral Harp
				303	Timpani
				304	String Ensemble 1
				305	String Ensemble 2
				306	SynthStrings 1
				307	SynthStrings 2
				308	Choir Aahs
				309	Voice Oohs
				310	Synth Voice
				311	Orchestra Hit



Ton-Liste - 1000 Arten

312	Trumpet	351	Pad 8 (sweep)	390	Harpsichord	429	Pizzicato Strings
313	Trombone	352	FX 1 (rain)	391	Clavinet	430	Orchestral Harp
314	Tuba	353	FX 2 (soundtrack)	392	Celesta	431	Timpani
315	Muted Trumpet	354	FX 3 (crystal)	393	Glockenspiel	432	String Ensemble 1
316	French Horn	355	FX 4 (atmosphere)	394	Music Box	433	String Ensemble 2
317	Brass Section	356	FX 5 (brightness)	395	Vibraphone	434	SynthStrings 1
318	Synth Brass 1	357	FX 6 (goblins)	396	Marimba	435	SynthStrings 2
319	Synth Brass 2	358	FX 7 (echoes)	397	Xylophone	436	Choir Aahs
320	Soprano Sax	359	FX 8 (sci fi)	398	Tubular Bells	437	Voice Oohs
321	Alto Sax	360	Sitar	399	Santur	438	Synth Voice
322	Tenor Sax	361	Banjo	400	Hammond Organ	439	Orchestra Hit
323	Baritone Sax	362	Shamisen	401	Percussive Organ	440	Trumpet
324	Oboe	363	Koto	402	Rock Organ	441	Trombone
325	English Horn	364	Kalimba	403	Church Organ	442	Tuba
326	Bassoon	365	Bagpipe	404	Reed Organ	443	Muted Trumpet
327	Clarinet	366	Fiddle	405	Accordion	444	French Horn
328	Piccolo	367	Shanai	406	Harmonica	445	Brass Section
329	Flute	368	Tinkle Bell	407	Bandoneon	446	Synth Brass 1
330	Recorder	369	Agogo	408	Acoustic Guitar (nylon)	447	Synth Brass 2
331	Pan Flute	370	Steel Drums	409	Acoustic Guitar(steel)	448	Soprano Sax
332	Bottle Blow	371	Woodblock	410	Electric Guitar (jazz)	449	Alto Sax
333	Skakuhachi	372	Taiko Drum	411	Electric Guitar (clean)	450	Tenor Sax
334	Whistle	373	Melodic Tom	412	Electric Guitar (muted)	451	Baritone Sax
335	Ocarina	374	Synth Drum	413	Overdriven Guitar	452	Oboe
336	Lead 1 (square)	375	Reverse Cymbal	414	Distortion Guitar	453	English Horn
337	Lead 2 (sawtooth)	376	Guitar Fret Noise	415	Guitar Harmonics	454	Bassoon
338	Lead 3 (calliope lead)	377	Breath Noise	416	Acoustic Bass	455	Clarinet
339	Lead 4 (chiff lead)	378	Seashore	417	Electric Bass(finger)	456	Piccolo
340	Lead 5 (charang)	379	Bird Tweet	418	Electric Bass(pick)	457	Flute
341	Lead 6 (voice)	380	Telephone Ring	419	Fretless Bass	458	Recorder
342	Lead 7 (fifths)	381	Helicopter	420	Slap Bass 1	459	Pan Flute
343	Lead 8 (bass+lead)	382	Applause	421	Slap Bass 2	460	Bottle Blow
344	Pad 1 (new age)	383	Gun shot	422	Synth Bass 1	461	Skakuhachi
345	Pad 2 (warm)	384	Piano 1	423	Synth Bass 2	462	Whistle
346	Pad 3 (poly synth)	385	Piano 2	424	Violin	463	Ocarina
347	Pad 4 (choir)	386	Piano 3	425	Viola	464	Lead 1 (square)
348	Pad 5 (bowed)	387	Honky Tonk Piano	426	Cello	465	Lead 2 (sawtooth)
349	Pad 6 (metallic)	388	Rhodes Piano	427	Contrabass	466	Lead 3 (calliope lead)
350	Pad 7 (halo)	389	Chorused Piano	428	Tremolo Strings	467	Lead 4 (chiff lead)



Ton-Liste - 1000 Arten

468	Lead 5 (charang)	507	Bird Tweet	546	Electric Bass(pick)	585	Flute
469	Lead 6 (voice)	508	Telephone Ring	547	Fretless Bass	586	Recorder
470	Lead 7 (fifths)	509	Helicopter	548	Slap Bass 1	587	Pan Flute
471	Lead 8 (bass+lead)	510	Applause	549	Slap Bass 2	588	Bottle Blow
472	Pad 1 (new age)	511	Gun shot	550	Synth Bass 1	589	Skakuhachi
473	Pad 2 (warm)	512	Piano 1	551	Synth Bass 2	590	Whistle
474	Pad 3 (poly synth)	513	Piano 2	552	Violin	591	Ocarina
475	Pad 4 (choir)	514	Piano 3	553	Viola	592	Lead 1 (square)
476	Pad 5 (bowed)	515	Honky Tonk Piano	554	Cello	593	Lead 2 (sawtooth)
477	Pad 6 (metallic)	516	Rhodes Piano	555	Contrabass	594	Lead 3 (calliope lead)
478	Pad 7 (halo)	517	Chorused Piano	556	Tremolo Strings	595	Lead 4 (chiff lead)
479	Pad 8 (sweep)	518	Harpsichord	557	Pizzicato Strings	596	Lead 5 (charang)
480	FX 1 (rain)	519	Clavinet	558	Orchestral Harp	597	Lead 6 (voice)
481	FX 2 (soundtrack)	520	Celesta	559	Timpani	598	Lead 7 (fifths)
482	FX 3 (crystal)	521	Glockenspiel	560	String Ensemble 1	599	Lead 8 (bass+lead)
483	FX 4 (atmosphere)	522	Music Box	561	String Ensemble 2	600	Pad 1 (new age)
484	FX 5 (brightness)	523	Vibraphone	562	SynthStrings 1	601	Pad 2 (warm)
485	FX 6 (goblins)	524	Marimba	563	SynthStrings 2	602	Pad 3 (poly synth)
486	FX 7 (echoes)	525	Xylophone	564	Choir Aahs	603	Pad 4 (choir)
487	FX 8 (sci fi)	526	Tubular Bells	565	Voice Oohs	604	Pad 5 (bowed)
488	Sitar	527	Santur	566	Synth Voice	605	Pad 6 (metallic)
489	Banjo	528	Hammond Organ	567	Orchestra Hit	606	Pad 7 (halo)
490	Shamisen	529	Percussive Organ	568	Trumpet	607	Pad 8 (sweep)
491	Koto	530	Rock Organ	569	Trombone	608	FX 1 (rain)
492	Kalimba	531	Church Organ	570	Tuba	609	FX 2 (soundtrack)
493	Bagpipe	532	Reed Organ	571	Muted Trumpet	610	FX 3 (crystal)
494	Fiddle	533	Accordion	572	French Horn	611	FX 4 (atmosphere)
495	Shanai	534	Harmonica	573	Brass Section	612	FX 5 (brightness)
496	Tinkle Bell	535	Bandoneon	574	Synth Brass 1	613	FX 6 (goblins)
497	Agogo	536	Acoustic Guitar (nylon)	575	Synth Brass 2	614	FX 7 (echoes)
498	Steel Drums	537	Acoustic Guitar(steel)	576	Soprano Sax	615	FX 8 (sci fi)
499	Woodblock	538	Electric Guitar (jazz)	577	Alto Sax	616	Sitar
500	Taiko Drum	539	Electric Guitar (clean)	578	Tenor Sax	617	Banjo
501	Melodic Tom	540	Electric Guitar (muted)	579	Baritone Sax	618	Shamisen
502	Synth Drum	541	Overdriven Guitar	580	Oboe	619	Koto
503	Reverse Cymbal	542	Distortion Guitar	581	English Horn	620	Kalimba
504	Guitar Fret Noise	543	Guitar Harmonics	582	Bassoon	621	Bagpipe
505	Breath Noise	544	Acoustic Bass	583	Clarinet	622	Fiddle
506	Seashore	545	Electric Bass(finger)	584	Piccolo	623	Shanai



Ton-Liste - 1000 Arten

624	Tinkle Bell	663	Bandoneon	702	Synth Brass 1	741	FX 6 (goblins)
625	Agogo	664	Acoustic Guitar (nylon)	703	Synth Brass 2	742	FX 7 (echoes)
626	Steel Drums	665	Acoustic Guitar(steel)	704	Soprano Sax	743	FX 8 (sci-fi)
627	Woodblock	666	Electric Guitar (jazz)	705	Alto Sax	744	Sitar
628	Taiko Drum	667	Electric Guitar (clean)	706	Tenor Sax	745	Banjo
629	Melodic Tom	668	Electric Guitar (muted)	707	Baritone Sax	746	Shamisen
630	Synth Drum	669	Overdriven Guitar	708	Oboe	747	Koto
631	Reverse Cymbal	670	Distortion Guitar	709	English Horn	748	Kalimba
632	Guitar Fret Noise	671	Guitar Harmonics	710	Bassoon	749	Bagpipe
633	Breath Noise	672	Acoustic Bass	711	Clarinet	750	Fiddle
634	Seashore	673	Electric Bass(finger)	712	Piccolo	751	Shanai
635	Bird Tweet	674	Electric Bass(pick)	713	Flute	752	Tinkle Bell
636	Telephone Ring	675	Fretless Bass	714	Recorder	753	Agogo
637	Helicopter	676	Slap Bass 1	715	Pan Flute	754	Steel Drums
638	Applause	677	Slap Bass 2	716	Bottle Blow	755	Woodblock
639	Gun shot	678	Synth Bass 1	717	Skakuhachi	756	Taiko Drum
640	Piano 1	679	Synth Bass 2	718	Whistle	757	Melodic Tom
641	Piano 2	680	Violin	719	Ocarina	758	Synth Drum
642	Piano 3	681	Viola	720	Lead 1 (square)	759	Reverse Cymbal
643	Honky Tonk Piano	682	Cello	721	Lead 2 (sawtooth)	760	Guitar Fret Noise
644	Rhodes Piano	683	Contrabass	722	Lead 3 (calliope lead)	761	Breath Noise
645	Chorused Piano	684	Tremolo Strings	723	Lead 4 (chiff lead)	762	Seashore
646	Harpsichord	685	Pizzicato Strings	724	Lead 5 (charang)	763	Bird Tweet
647	Clavinet	686	Orchestral Harp	725	Lead 6 (voice)	764	Telephone Ring
648	Celesta	687	Timpani	726	Lead 7 (fifths)	765	Helicopter
649	Glockenspiel	688	String Ensemble 1	727	Lead 8 (bass+lead)	766	Applause
650	Music Box	689	String Ensemble 2	728	Pad 1 (new age)	767	Gun shot
651	Vibraphone	690	SynthStrings 1	729	Pad 2 (warm)	768	Piano 1
652	Marimba	691	SynthStrings 2	730	Pad 3 (poly synth)	769	Piano 2
653	Xylophone	692	Choir Aahs	731	Pad 4 (choir)	770	Piano 3
654	Tubular Bells	693	Voice Oohs	732	Pad 5 (bowed)	771	Honky Tonk Piano
655	Santur	694	Synth Voice	733	Pad 6 (metallic)	772	Rhodes Piano
656	Hammond Organ	695	Orchestra Hit	734	Pad 7 (halo)	773	Chorused Piano
657	Percussive Organ	696	Trumpet	735	Pad 8 (sweep)	774	Harpsichord
658	Rock Organ	697	Trombone	736	FX 1 (rain)	775	Clavinet
659	Church Organ	698	Tuba	737	FX 2 (soundtrack)	776	Celesta
660	Reed Organ	699	Muted Trumpet	738	FX 3 (crystal)	777	Glockenspiel
661	Accordion	700	French Horn	739	FX 4 (atmosphere)	778	Music Box
662	Harmonica	701	Brass Section	740	FX 5 (brightness)	779	Vibraphone



Ton-Liste - 1000 Arten

780	Marimba	819	SynthStrings 2	858	Pad 3 (poly synth)	897	Piano 2
781	Xylophone	820	Choir Aahs	859	Pad 4 (choir)	898	Piano 3
782	Tubular Bells	821	Voice Oohs	860	Pad 5 (bowed)	899	Honky Tonk Piano
783	Santur	822	Synth Voice	861	Pad 6 (metallic)	900	Rhodes Piano
784	Hammond Organ	823	Orchestra Hit	862	Pad 7 (halo)	901	Chorused Piano
785	Percussive Organ	824	Trumpet	863	Pad 8 (sweep)	902	Harpsichord
786	Rock Organ	825	Trombone	864	FX 1 (rain)	903	Clavinet
787	Church Organ	826	Tuba	865	FX 2 (soundtrack)	904	Celesta
788	Reed Organ	827	Muted Trumpet	866	FX 3 (crystal)	905	Glockenspiel
789	Accordion	828	French Horn	867	FX 4 (atmosphere)	906	Music Box
790	Harmonica	829	Brass Section	868	FX 5 (brightness)	907	Vibraphone
791	Bandoneon	830	Synth Brass 1	869	FX 6 (goblins)	908	Marimba
792	Acoustic Guitar (nylon)	831	Synth Brass 2	870	FX 7 (echoes)	909	Xylophone
793	Acoustic Guitar(steel)	832	Soprano Sax	871	FX 8 (sci fi)	910	Tubular Bells
794	Electric Guitar (jazz)	833	Alto Sax	872	Sitar	911	Santur
795	Electric Guitar (clean)	834	Tenor Sax	873	Banjo	912	Hammond Organ
796	Electric Guitar (muted)	835	Baritone Sax	874	Shamisen	913	Percussive Organ
797	Overdriven Guitar	836	Oboe	875	Koto	914	Rock Organ
798	Distortion Guitar	837	English Horn	876	Kalimba	915	Church Organ
799	Guitar Harmonics	838	Bassoon	877	Bagpipe	916	Reed Organ
800	Acoustic Bass	839	Clarinet	878	Fiddle	917	Accordion
801	Electric Bass(finger)	840	Piccolo	879	Shanai	918	Harmonica
802	Electric Bass(pick)	841	Flute	880	Tinkle Bell	919	Bandoneon
803	Fretless Bass	842	Recorder	881	Agogo	920	Acoustic Guitar (nylon)
804	Slap Bass 1	843	Pan Flute	882	Steel Drums	921	Acoustic Guitar(steel)
805	Slap Bass 2	844	Bottle Blow	883	Woodblock	922	Electric Guitar (jazz)
806	Synth Bass 1	845	Skakuhachi	884	Taiko Drum	923	Electric Guitar (clean)
807	Synth Bass 2	846	Whistle	885	Melodic Tom	924	Electric Guitar (muted)
808	Violin	847	Ocarina	886	Synth Drum	925	Overdriven Guitar
809	Viola	848	Lead 1 (square)	887	Reverse Cymbal	926	Distortion Guitar
810	Cello	849	Lead 2 (sawtooth)	888	Guitar Fret Noise	927	Guitar Harmonics
811	Contrabass	850	Lead 3 (calliope lead)	889	Breath Noise	928	Acoustic Bass
812	Tremolo Strings	851	Lead 4 (chiff lead)	890	Seashore	929	Electric Bass(finger)
813	Pizzicato Strings	852	Lead 5 (charang)	891	Bird Tweet	930	Electric Bass(pick)
814	Orchestral Harp	853	Lead 6 (voice)	892	Telephone Ring	931	Fretless Bass
815	Timpani	854	Lead 7 (fifths)	893	Helicopter	932	Slap Bass 1
816	String Ensemble 1	855	Lead 8 (bass lead)	894	Applause	933	Slap Bass 2
817	String Ensemble 2	856	Pad 1 (new age)	895	Gun shot	934	Synth Bass 1
818	SynthStrings 1	857	Pad 2 (warm)	896	Piano 1	935	Synth Bass 2



Anhang

Ton-Liste - 1000 Arten			Rhythmus-Liste - 1000 Arten				
936	Violin	975	Ocarina	0	8BIT1	39	QUICKBEAT
937	Viola	976	Lead 1 (square)	1	8BIT2	40	REGGAE1
938	Cello	977	Lead 2 (sawtooth)	2	16BIT1	41	REGGAE2
939	Contrabass	978	Lead 3 (calliope lead)	3	16BIT2	42	REGGAEWALTZ
940	Tremolo Strings	979	Lead 4 (chiff lead)	4	50SBALLAD	43	RKLT81
941	Pizzicato Strings	980	Lead 5 (charang)	5	60SSLOWBALLAD	44	SHUFFLEWALTZ
942	Orchestral Harp	981	Lead 6 (voice)	6	ACCELERATE	45	SIMPLEJAM
943	Timpani	982	Lead 7 (fifths)	7	AG_FRANK	46	SLOW1
944	String Ensemble 1	983	Lead 8 (bass lead)	8	ALABAMA	47	SLOW2
945	String Ensemble 2	984	Pad 1 (new age)	9	ALPHADANCE	48	SLOWPURE
946	SynthStrings 1	985	Pad 2 (warm)	10	BALLAD16T	49	SLOWRC
947	SynthStrings 2	986	Pad 3 (poly synth)	11	BEACHNIGHT	50	SMOOTHBEAT
948	Choir Aahs	987	Pad 4 (choir)	12	BEGUINESWING	51	SOUL
949	Voice Oohs	988	Pad 5 (bowed)	13	BLUEGRAS	52	SQUAREBEAT
950	Synth Voice	989	Pad 6 (metallic)	14	BLUHILL	53	STRAYST8
951	Orchestra Hit	990	Pad 7 (halo)	15	BOLERO	54	SURF1
952	Trumpet	991	Pad 8 (sweep)	16	COUNTRYSHUFFLE1	55	SURF2
953	Trombone	992	FX 1 (rain)	17	DANDUT	56	SURFIN
954	Tuba	993	FX 2 (soundtrack)	18	DESTINY	57	SYNTHETHIX
955	Muted Trumpet	994	FX 3 (crystal)	19	DRAMA	58	CULCLUB
956	French Horn	995	FX 4 (atmosphere)	20	DRANDR	59	TEMPTNS
957	Brass Section	996	FX 5 (brightness)	21	DREAMSHUFFLE	60	TOASTR
958	Synth Brass 1	997	FX 6 (goblins)	22	DURDSLOW	61	TRACYCH
959	Synth Brass 2	998	FX 7 (echoes)	23	EASYWALK	62	TRAIN
960	Soprano Sax	999	FX 8 (sci fi)	24	ELEGANT	63	TRANSX
961	Alto Sax			25	ETHWZ	64	TRUCKIN
962	Tenor Sax			26	EXODUS	65	TWIST
963	Baritone Sax			27	FASTBEAT	66	UKGROOVE
964	Oboe			28	FEEL	67	UKMOOD
965	English Horn			29	FIDELITY	68	UKPWRBAL
966	Bassoon			30	GEORGEM	69	UKREGGAE
967	Clarinet			31	GITGROOV	70	UKROSE
968	Piccolo			32	HEARTROCK	71	UPLIFT1
969	Flute			33	KERON	72	UPLIFT2
970	Recorder			34	LA_PBAL	73	URBFOLK
971	Pan Flute			35	LYNYRD	74	VANNUYS
972	Bottle Blow			36	MADONAM	75	VAPOR
973	Skakuhachi			37	NEWAGE	76	VENTURE
974	Whistle			38	POPMALAY	77	VULP



Rhythmus-Liste - 1000 Arten

78	WAHGWAAN	117	SAMBA1	156	FEEL	196	UKPWRBAL
79	WALZFAST	118	SNAKEBASE	157	FIDELITY	197	UKREGGAE
80	WALZGERM	119	TANGO1	158	GEORGEM	198	UKROSE
81	WR_SLOW	120	WALTZL1	159	GITGROOV	199	UPLIFT1
82	YESTRDAY	121	DISCOCHA	160	HEARTROCK	200	UPLIFT2
83	ZZMILYP	122	SALSA1	161	KERON	201	URBFOLK
84	ROKBLUS	123	POP_SADE	162	LA_PBAL	202	VANNUYS
85	ROLLEM	124	DIXIE1	163	LYNYRD	203	VAPOR
86	SAILING	125	DIXIE2	164	MADONAM	204	VENTURE
87	SASSER	126	1-Mar	165	NEWAGE	205	VULP
88	TEKWILD	127	2-Mar	166	POPMALAY	206	WAHGWAAN
89	ZZMILYP	128	8BIT1	167	QUICKBEAT	207	WALZFAST
90	AG_ARETH	129	8BIT2	168	REGGAE1	208	WALZGERM
91	ASHANT	130	16BIT1	169	REGGAE2	209	WR_SLOW
92	BEEBSHF	131	16BIT2	170	REGGAEWALTZ	210	YESTRDAY
93	BIGBAND	132	50SBALLAD	171	RKLT81	211	ZZMILYP
94	BODDIE1	133	60SSLOWBALLAD	172	SHUFFLEWALTZ	212	ROKBLUS
95	60ROK8	134	ACCELERATE	173	SIMPLEJAM	213	ROLLEM
96	80SYRCK	135	AG_FRANK	174	SLOW1	214	SAILING
97	R.ROLL2	136	ALABAMA	175	SLOW2	215	SASSER
98	ROCK2	137	ALPHADANCE	176	SLOWPURE	216	TEKWILD
99	BEGUINE1	138	BALLAD16T	177	SLOWRC	217	ZZMILYP
100	BEGUINE2	139	BEACHNIGHT	178	SMOOTHBEAT	218	AG_ARETH
101	BLUEGRASSDISCO	140	BEGUINESWING	179	SOUL	219	ASHANT
102	BOSSAWALTZ	141	BLUEGRAS	180	SQUAREBEAT	220	BEEBSHF
103	CHARL	142	BLUHILL	181	STRAYST8	221	BIGBAND
104	CLUBMINIMAL	143	BOLERO	182	SURF1	222	BODDIE1
105	DISCO1	144	COUNTRYSHUFFLE1	183	SURF2	223	60ROK8
106	DISCO2	145	DANDUT	184	SURFIN	224	80SYRCK
107	EASYWALTZ	146	DESTINY	185	SYNTHETHIX	225	R.ROLL2
108	EUROBEAT	147	DRAMA	186	CULCLUB	226	ROCK2
109	FOXTROT1	148	DRANDR	187	TEMPTNS	227	BEGUINE1
110	POLKA1	149	DREAMSHUFFLE	188	TOASTR	228	BEGUINE2
111	POLKA2	150	DURDSLOW	189	TRACYCH	229	BLUEGRASSDISCO
112	POPHIT	151	EASYWALK	190	TRAIN	230	BOSSAWALTZ
113	QUICKSHUFFLE	152	ELEGANT	191	TRANSX	231	CHARL
114	RHUMBA1	153	ETHWZ	192	TRUCKIN	232	CLUBMINIMAL
115	RHUMBA2	154	EXODUS	193	TWIST	233	DISCO1
116	RHUMBAWALTZ	155	FASTBEAT	194	UKGROOVE	234	DISCO2



Rhythmus-Liste - 1000 Arten

235	EASYWALTZ	274	DESTINY	313	SYNTHETHIX	352	80SYRCK
236	EUROBEAT	275	DRAMA	314	CULCLUB	353	R.ROLL2
237	FOXTROT1	276	DRANDR	315	TEMPTNS	354	ROCK2
238	POLKA1	277	DREAMSHUFFLE	316	TOASTR	355	BEGUINE1
239	POLKA2	278	DURDSLOW	317	TRACYCH	356	BEGUINE2
240	POPHIT	279	EASYWALK	318	TRAIN	357	BLUEGRASSDISCO
241	QUICKSHUFFLE	280	ELEGANT	319	TRANSX	358	BOSSAWALTZ
242	RHUMBA1	281	ETHWZ	320	TRUCKIN	359	CHARL
243	RHUMBA2	282	EXODUS	321	TWIST	360	CLUBMINIMAL
244	RHUMBAWALTZ	283	FASTBEAT	322	UKGROOVE	361	DISCO1
245	SAMBA1	284	FEEL	323	UKMOOD	362	DISCO2
246	SNAKEBASE	285	FIDELITY	324	UKPWRBAL	363	EASYWALTZ
247	TANGO1	286	GEORGEM	325	UKREGGAE	364	EUROBEAT
248	WALTZL1	287	GITGROOV	326	UKROSE	365	FOXTROT1
249	DISCOCHA	288	HEARTROCK	327	UPLIFT1	366	POLKA1
250	SALSA1	289	KERON	328	UPLIFT2	367	POLKA2
251	POP_SADE	290	LA_PBAL	329	URBFOLK	368	POPHIT
252	DIXIE1	291	LYNYRD	330	VANNUYS	369	QUICKSHUFFLE
253	DIXIE2	292	MADONAM	331	VAPOR	370	RHUMBA1
254	1-Mar	293	NEWAGE	332	VENTURE	371	RHUMBA2
255	2-Mar	294	POPMALAY	333	VULP	372	RHUMBAWALTZ
256	8BIT1	295	QUICKBEAT	334	WAHGWAAN	373	SAMBA1
257	8BIT2	296	REGGAE1	335	WALZFAST	374	SNAKEBASE
258	16BIT1	297	REGGAE2	336	WALZGERM	375	TANGO1
259	16BIT2	298	REGGAEWALTZ	337	WR_SLOW	376	WALTZL1
260	50SBALLAD	299	RKLT81	338	YESTRDAY	377	DISCOCHA
261	60SSLOWBALLAD	300	SHUFFLEWALTZ	339	ZZMILYP	378	SALSA1
262	ACCELERATE	301	SIMPLEJAM	340	ROKBLUS	379	POP_SADE
263	AG_FRANK	302	SLOW1	341	ROLLEM	380	DIXIE1
264	ALABAMA	303	SLOW2	342	SAILING	381	DIXIE2
265	ALPHADANCE	304	SLOWPURE	343	SASSER	382	1-Mar
266	BALLAD16T	305	SLOWRC	344	TEKWILD	383	2-Mar
267	BEACHNIGHT	306	SMOOTHBEAT	345	ZZMILYP	384	8BIT1
268	BEGUINESWING	307	SOUL	346	AG_ARETH	385	8BIT2
269	BLUEGRAS	308	SQUAREBEAT	347	ASHANT	386	16BIT1
270	BLUHILL	309	STRAYST8	348	BEEBSHF	387	16BIT2
271	BOLERO	310	SURF1	349	BIGBAND	388	50SBALLAD
272	COUNTRYSHUFFLE1	311	SURF2	350	BODDIE1	389	60SSLOWBALLAD
273	DANDUT	312	SURFIN	351	60ROK8	390	ACCELERATE



Rhythmus-Liste - 1000 Arten

391	AG_FRANK	430	SLOW1	469	ROLLEM	508	DIXIE1
392	ALABAMA	431	SLOW2	470	SAILING	509	DIXIE2
393	ALPHADANCE	432	SLOWPURE	471	SASSER	510	1-Mar
394	BALLAD16T	433	SLOWRC	472	TEKWILD	511	2-Mar
395	BEACHNIGHT	434	SMOOTHBEAT	473	ZZMILLYP	512	8BIT1
396	BEGUINESWING	435	SOUL	474	AG_ARETH	513	8BIT2
397	BLUEGRAS	436	SQUAREBEAT	475	ASHANT	514	16BIT1
398	BLUHILL	437	STRAYST8	476	BEEBSHF	515	16BIT2
399	BOLERO	438	SURF1	477	BIGBAND	516	50SBALLAD
400	COUNTRYSHUFFLE1	439	SURF2	478	BODDIE1	517	60SSLOWBALLAD
401	DANDUT	440	SURFIN	479	60ROK8	518	ACCELERATE
402	DESTINY	441	SYNTHETHIX	480	80SYRCK	519	AG_FRANK
403	DRAMA	442	CULCLUB	481	R.ROLL2	520	ALABAMA
404	DRANDR	443	TEMPTNS	482	ROCK2	521	ALPHADANCE
405	DREAMSHUFFLE	444	TOASTR	483	BEGUINE1	522	BALLAD16T
406	DURDSLOW	445	TRACYCH	484	BEGUINE2	523	BEACHNIGHT
407	EASYWALK	446	TRAIN	485	BLUEGRASSDISCO	524	BEGUINESWING
408	ELEGANT	447	TRANSX	486	BOSSAWALTZ	525	BLUEGRAS
409	ETHWZ	448	TRUCKIN	487	CHARL	526	BLUHILL
410	EXODUS	449	TWIST	488	CLUBMINIMAL	527	BOLERO
411	FASTBEAT	450	UKGROOVE	489	DISCO1	528	COUNTRYSHUFFLE1
412	FEEL	451	UKMOOD	490	DISCO2	529	DANDUT
413	FIDELITY	452	UKPWRBAL	491	EASYWALTZ	530	DESTINY
414	GEORGEM	453	UKREGGAE	492	EUROBEAT	531	DRAMA
415	GITGROOV	454	UKROSE	493	FOXTROT1	532	DRANDR
416	HEARTROCK	455	UPLIFT1	494	POLKA1	533	DREAMSHUFFLE
417	KERON	456	UPLIFT2	495	POLKA2	534	DURDSLOW
418	LA_PBAL	457	URBFOLK	496	POPHIT	535	EASYWALK
419	LYNYRD	458	VANNUYS	497	QUICKSHUFFLE	536	ELEGANT
420	MADONAM	459	VAPOR	498	RHUMBA1	537	ETHWZ
421	NEWAGE	460	VENTURE	499	RHUMBA2	538	EXODUS
422	POPMALAY	461	VULP	500	RHUMBAWALTZ	539	FASTBEAT
423	QUICKBEAT	462	WAHGWAAN	501	SAMBA1	540	FEEL
424	REGGAE1	463	WALZFAST	502	SNAKEBASE	541	FIDELITY
425	REGGAE2	464	WALZGERM	503	TANGO1	542	GEORGEM
426	REGGAEWALTZ	465	WR_SLOW	504	WALTZL1	543	GITGROOV
427	RKLT81	466	YESTRDAY	505	DISCOCHA	544	HEARTROCK
428	SHUFFLEWALTZ	467	ZZMILYP	506	SALSA1	545	KERON
429	SIMPLEJAM	468	ROKBLUS	507	POP_SADE	546	LA_PBAL



Rhythmus-Liste - 1000 Arten

547	LYNYRD	586	VANNUYS	625	QUICKSHUFFLE	664	ELEGANT
548	MADONAM	587	VAPOR	626	RHUMBA1	665	ETHWZ
549	NEWAGE	588	VENTURE	627	RHUMBA2	666	EXODUS
550	POPMALAY	589	VULP	628	RHUMBAWALTZ	667	FASTBEAT
551	QUICKBEAT	590	WAHGWAAN	629	SAMBA1	668	FEEL
552	REGGAE1	591	WALZFAST	630	SNAKEBASE	669	FIDELITY
553	REGGAE2	592	WALZGERM	631	TANGO1	670	GEORGEM
554	REGGAEWALTZ	593	WR_SLOW	632	WALTZL1	671	GITGROOV
555	RKLT81	594	YESTRDAY	633	DISCOCHA	672	HEARTROCK
556	SHUFFLEWALTZ	595	ZZMILYP	634	SALSA1	673	KERON
557	SIMPLEJAM	596	ROKBLUS	635	POP_SADE	674	LA_PBAL
558	SLOW1	597	ROLLEM	636	DIXIE1	675	LYNYRD
559	SLOW2	598	SAILING	637	DIXIE2	676	MADONAM
560	SLOWPURE	599	SASSER	638	1-Mar	677	NEWAGE
561	SLOWRC	600	TEKWILD	639	2-Mar	678	POPMALAY
562	SMOOTHBEAT	601	ZZMILLYP	640	8BIT1	679	QUICKBEAT
563	SOUL	602	AG_ARETH	641	8BIT2	680	REGGAE1
564	SQUAREBEAT	603	ASHANT	642	16BIT1	681	REGGAE2
565	STRAYST8	604	BEEBSHF	643	16BIT2	682	REGGAEWALTZ
566	SURF1	605	BIGBAND	644	50SBALLAD	683	RKLT81
567	SURF2	606	BODDIE1	645	60SSLOWBALLAD	684	SHUFFLEWALTZ
568	SURFIN	607	60ROK8	646	ACCELERATE	685	SIMPLEJAM
569	SYNTHETHIX	608	80SYRCK	647	AG_FRANK	686	SLOW1
570	CULCLUB	609	R.ROLL2	648	ALABAMA	687	SLOW2
571	TEMPTNS	610	ROCK2	649	ALPHADANCE	688	SLOWPURE
572	TOASTR	611	BEGUINE1	650	BALLAD16T	689	SLOWRC
573	TRACYCH	612	BEGUINE2	651	BEACHNIGHT	690	SMOOTHBEAT
574	TRAIN	613	BLUEGRASSDISCO	652	BEGUINESWING	691	SOUL
575	TRANSX	614	BOSSAWALTZ	653	BLUEGRAS	692	SQUAREBEAT
576	TRUCKIN	615	CHARL	654	BLUHILL	693	STRAYST8
577	TWIST	616	CLUBMINIMAL	655	BOLERO	694	SURF1
578	UKGROOVE	617	DISCO1	656	COUNTRYSHUFFLE1	695	SURF2
579	UKMOOD	618	DISCO2	657	DANDUT	696	SURFIN
580	UKPWRBAL	619	EASYWALTZ	658	DESTINY	697	SYNTHETHIX
581	UKREGGAE	620	EUROBEAT	659	DRAMA	698	CULCLUB
582	UKROSE	621	FOXTROT1	660	DRANDR	699	TEMPTNS
583	UPLIFT1	622	POLKA1	661	DREAMSHUFFLE	700	TOASTR
584	UPLIFT2	623	POLKA2	662	DURDSLOW	701	TRACYCH
585	URBFOLK	624	POPHIT	663	EASYWALK	702	TRAIN



Rhythmus-Liste - 1000 Arten

703	TRANSX	742	BOSSAWALTZ	781	BLUEGRAS	820	SQUAREBEAT
704	TRUCKIN	743	CHARL	782	BLUHILL	821	STRAYST8
705	TWIST	744	CLUBMINIMAL	783	BOLERO	822	SURF1
706	UKGROOVE	745	DISCO1	784	COUNTRYSHUFFLE1	823	SURF2
707	UKMOOD	746	DISCO2	785	DANDUT	824	SURFIN
708	UKPWRBAL	747	EASYWALTZ	786	DESTINY	825	SYNTHETHIX
709	UKREGGAE	748	EUROBEAT	787	DRAMA	826	CULCLUB
710	UKROSE	749	FOXTROT1	788	DRANDR	827	TEMPTNS
711	UPLIFT1	750	POLKA1	789	DREAMSHUFFLE	828	TOASTR
712	UPLIFT2	751	POLKA2	790	DURDSLOW	829	TRACYCH
713	URBFOLK	752	POPHIT	791	EASYWALK	830	TRAIN
714	VANNUYS	753	QUICKSHUFFLE	792	ELEGANT	831	TRANSX
715	VAPOR	754	RHUMBA1	793	ETHWZ	832	TRUCKIN
716	VENTURE	755	RHUMBA2	794	EXODUS	833	TWIST
717	VULP	756	RHUMBAWALTZ	795	FASTBEAT	834	UKGROOVE
718	WAHGWAAN	757	SAMBA1	796	FEEL	835	UKMOOD
719	WALZFAST	758	SNAKEBASE	797	FIDELITY	836	UKPWRBAL
720	WALZGERM	759	TANGO1	798	GEORGEM	837	UKREGGAE
721	WR_SLOW	760	WALTZL1	799	GITGROOV	838	UKROSE
722	YESTRDAY	761	DISCOCHA	800	HEARTROCK	839	UPLIFT1
723	ZZMILYP	762	SALSA1	801	KERON	840	UPLIFT2
724	ROKBLUS	763	POP_SADE	802	LA_PBAL	841	URBFOLK
725	ROLLEM	764	DIXIE1	803	LYNYRD	842	VANNUYS
726	SAILING	765	DIXIE2	804	MADONAM	843	VAPOR
727	SASSER	766	1-Mar	805	NEWAGE	844	VENTURE
728	TEKWILD	767	2-Mar	806	POPMALAY	845	VULP
729	ZZMILLYP	768	8BIT1	807	QUICKBEAT	846	WAHGWAAN
730	AG_ARETH	769	8BIT2	808	REGGAE1	847	WALZFAST
731	ASHANT	770	16BIT1	809	REGGAE2	848	WALZGERM
732	BEEBSHF	771	16BIT2	810	REGGAEWALTZ	849	WR_SLOW
733	BIGBAND	772	50SBALLAD	811	RKLT81	850	YESTRDAY
734	BODDIE1	773	60SSLOWBALLAD	812	SHUFFLEWALTZ	851	ZZMILYP
735	60ROK8	774	ACCELERATE	813	SIMPLEJAM	852	ROKBLUS
736	80SYRCK	775	AG_FRANK	814	SLOW1	853	ROLLEM
737	R.ROLL2	776	ALABAMA	815	SLOW2	854	SAILING
738	ROCK2	777	ALPHADANCE	816	SLOWPURE	855	SASSER
739	BEGUINE1	778	BALLAD16T	817	SLOWRC	856	TEKWILD
740	BEGUINE2	779	BEACHNIGHT	818	SMOOTHBEAT	857	ZZMILLYP
741	BLUEGRASSDISCO	780	BEGUINESWING	819	SOUL	858	AG_ARETH



Rhythmus-Liste - 1000 Arten

859	ASHANT	898	16BIT1	937	REGGAE2	976	WALZGERM
860	BEEBSHF	899	16BIT2	938	REGGAEWALTZ	977	WR_SLOW
861	BIGBAND	900	50SBALLAD	939	RKLT81	978	YESTRDAY
862	BODDIE1	901	60SSLOWBALLAD	940	SHUFFLEWALTZ	979	ZZMILYP
863	60ROK8	902	ACCELERATE	941	SIMPLEJAM	980	ROKBLUS
864	80SYRCK	903	AG_FRANK	942	SLOW1	981	ROLLEM
865	R.ROLL2	904	ALABAMA	943	SLOW2	982	SAILING
866	ROCK2	905	ALPHADANCE	944	SLOWPURE	983	SASSER
867	BEGUINE1	906	BALLAD16T	945	SLOWRC	984	TEKWILD
868	BEGUINE2	907	BEACHNIGHT	946	SMOOTHBEAT	985	ZZMILYP
869	BLUEGRASSDISCO	908	BEGUINESWING	947	SOUL	986	AG_ARETH
870	BOSSAWALTZ	909	BLUEGRAS	948	SQUAREBEAT	987	ASHANT
871	CHARL	910	BLUHILL	949	STRAYST8	988	BEEBSHF
872	CLUBMINIMAL	911	BOLERO	950	SURF1	989	BIGBAND
873	DISCO1	912	COUNTRYSHUFFLE1	951	SURF2	990	BODDIE1
874	DISCO2	913	DANDUT	952	SURFIN	991	60ROK8
875	EASYWALTZ	914	DESTINY	953	SYNTHETHIX	992	80SYRCK
876	EUROBEAT	915	DRAMA	954	CULCLUB	993	R.ROLL2
877	FOXTROT1	916	DRANDR	955	TEMPTNS	994	ROCK2
878	POLKA1	917	DREAMSHUFFLE	956	TOASTR	995	BEGUINE1
879	POLKA2	918	DURDSLOW	957	TRACYCH	996	BEGUINE2
880	POPHIT	919	EASYWALK	958	TRAIN	997	BLUEGRASSDISCO
881	QUICKSHUFFLE	920	ELEGANT	959	TRANSX	998	BOSSAWALTZ
882	RHUMBA1	921	ETHWZ	960	TRUCKIN	999	CHARL
883	RHUMBA2	922	EXODUS	961	TWIST		
884	RHUMBAWALTZ	923	FASTBEAT	962	UKGROOVE		
885	SAMBA1	924	FEEL	963	UKMOOD		
886	SNAKEBASE	925	FIDELITY	964	UKPWRBAL		
887	TANGO1	926	GEORGEM	965	UKREGGAE		
888	WALTZL1	927	GITGROOV	966	UKROSE		
889	DISCOCHA	928	HEARTROCK	967	UPLIFT1		
890	SALSA1	929	KERON	968	UPLIFT2		
891	POP_SADE	930	LA_PBAL	969	URBFOLK		
892	DIXIE1	931	LYNYRD	970	VANNUYS		
893	DIXIE2	932	MADONAM	971	VAPOR		
894	1-Mar	933	NEWAGE	972	VENTURE		
895	2-Mar	934	POPMALAY	973	VULP		
896	8BIT1	935	QUICKBEAT	974	WAHGWAAN		
897	8BIT2	936	REGGAE1	975	WALZFAST		



Demolieder - 200 Arten

000	All of Me	039	Obsessed	078	Musette in D major
001	Love is eternal	040	Rose in the palm	079	ELNEKLEI
002	Love in BC	041	Sweet honey	080	EveningFalls
003	Silence	042	Listening to the sea-Zhang Huimei	081	Prelude in E major
004	Iron box of the peninsula	043	The past is gone with the wind-Qi Qin	082	Feed The Birds
005	By the shore of Lake Baikal	044	Kiss goodbye-Jacky Cheung	083	FIGARO
006	Don't be afraid that I will be sad	045	Nameless person	084	Flower Dance
007	Absolutely infatuated	046	Little love song	085	FLOWERS
008	Those years in a hurry	047	Indifferent heart-JoeY Yung	086	Ecoses in G major
009	Misplaced time and space	048	Too soft heart	087	Head, Shoulders, Knees and Toes
010	Big city, small love	049	Yan Wuxi	088	If You're Happy And You Know It
011	About in winter	050	Grandpa's tea-Jay Chou	089	I'm a Little Teapot
012	May we live long	051	A million possibilities	090	Jana Gana Mana
013	Winter love song	052	Parting ways	091	m05-Silent Night
014	Confession balloon	053	The days we spent together	092	Mazurka
015	Glorious years	054	A thousand reasons for sadness	093	Notebook
016	Boundless sea and sky	055	Embracing you and leaving	094	Once I Caught a Fish Alive
017	Good-hearted breakup	056	Embracing love	095	OnceaCanadianLad
018	Red rose	057	How much love can come back	096	Rain Rain Go Away
019	Red dragonfly	058	The rain keeps falling-Zhang Yu	097	River flows in you
020	No future	059	Obsessed	098	RockSolidBlues
021	Simple love	060	AmazingGrace	099	Rondino
022	Jiangnan	061	AupresdemaBlonde	100	SeeHowtheNightArrives
023	Preface to Lanting	062	AveMaria	101	SonatinainC
024	Li Xianglan	063	Baby Shark	102	The Wheels on the Bus 2
025	Walking along the road of life	064	BEETHOVE	103	ToreadorfromCarmen
026	Like you slowly	065	Beethoven'sFifthSymphony	104	Arabian style - Burgmüller
027	Love you more every day	066	BigBadGoblinBlues	105	Axes Dance
028	Dandelion promise	067	Bingo	106	Romance of Love
029	Seven friends	068	Brahms'Lullaby	107	Concerto of Love
030	Thousands of songs	069	Waltz in B minor	108	Story of Love
031	Love is inevitable	070	Canon in D	109	Requiem - Lacrimosa-Requiem
032	Lover	071	CarribeanCruise	110	Anne's Song
033	Love is gone	072	Chim Chim Cheree	111	Anne's Wonderland
034	Where in life do we not meet Xian	073	CrippleCreek	112	The Storm
035	Easily hurt woman	074	Prelude in C major	113	Graduation Song
036	If this is not love	075	Sonata in C major	114	Bureau
037	As wished	076	DannyBoy	115	Voice of Spring Waltz - Johann Strauss
038	Ten years	077	DO RE MI	116	Inventions in Two Parts NO.1 in C Major - Bach



Demolieder - 200 Arten					
117	Two-part Invention - Bach	156	Girl's Prayer	195	Moonlight Sonata
118	Two-part Invention Chapter 4 - Bach	157	Prelude 848 in C-sharp Major	196	Moonlight Sonata, third movement
119	The Dove - Spanish Folk Song - Iradiel	158	Waltz in C-sharp Minor - Chopin	197	Moonlight Sonata excerpts
120	The Nutbox Dance	159	Ave Maria	198	To Elise
121	Gorgeous Waltz	160	Lyric Waltz - Shostakovich	199	Trout - Schubert
122	Ode to Joy	161	Schubert Piano Sonata		
123	Fantasy Impromptu	162	Arteline at the Waterside		
124	Melody of Memory	163	Memories of Childhood		
125	Wedding March	164	Turkish March		
126	Gavotte	165	Toccata		
127	Overture in E-flat Major 1812	166	Vanessa's Smile		
128	Jazz to Alice	167	Stories from the Vienna Woods - Classical Piano Music		
129	Military Polonaise	168	Spanish Bullfighter		
130	Carmen Overture	169	Spanish Dance		
131	Ode to Loveliness	170	Minuet		
132	Croatian Rhapsody	171	Sonata in Minor - First Movement		
133	Kurau Sonata OP-20-NO-1	172	Dog Waltz		
134	Happy Peasant	173	Violin Humoresque		
135	Wilderness	174	Twinkle Twinkle Little Star Variations - Mozart		
136	Radetzky March	175	Little Night Song		
137	Blue Danube	176	Serenade Haydn		
138	Butterfly Lovers	177	Waltz		
139	Glass Lake Shore	178	Schindler's List		
140	June Barcarolle - Tchaikovsky	179	Starry Sky		
141	Romeo and Juliet	180	Hungarian Rhapsody No. 6		
142	Green Sleeves	181	Hungarian Dance No. 5		
143	Mary Had a Little Lamb	182	Snow Fantasy		
144	Mazurka	183	Flight of the Bumblebee		
145	Beautiful Jazz	184	Air de la Petite Russia, Opus 107, No. 3		
146	Fantasy	185	The Nightingale is Singing		
147	Wedding in a Dream	186	One Step Away		
148	First Snow in the Misty Forest	187	Italian Polka - Rachmaninov		
149	Secret Courtyard	188	Music Box Dancer		
150	Thinking of Home	189	Music Moment - Schubert		
151	Fountain	190	Dance of the Fireflies		
152	Beer Barrel Polka	191	Humoresque - Dvorak		
153	Amazing Grace	192	Auld Lang Syne		
154	Whispers of Autumn	193	Rhythm in the Rain		
155	Forest Polka	194	Moonlight - Debussy		



Produktpflege

Eine sorgfältige Wartung und Schutz dieses Produkts spielt eine wichtige Rolle dabei, die Lebensdauer des Produkts zu verlängern und Ausfälle zu reduzieren.

1 VERMEIDEN SIE HITZE, FEUCHTIGKEIT ODER DIREKTE SONNENEINSTRALUNG

Setzen Sie das Produkt nicht übermäßig direkter Sonneneinstrahlung aus und stellen Sie es nicht in der Nähe von Klimaanlage oder extrem heißen Orten auf.

2 NICHT IN DER NÄHE VON FERNSEHERN ODER RADIOS VERWENDEN

Dieses Produkt kann Video- oder Audiointerferenzen bei der Empfang von Fernsehsignalen und Radiosignalen verursachen. Wenn dies geschieht, sollte das Produkt vom TV oder Radio entfernt werden.

3 KEINE FARBE, LÖSUNGSMITTEL ODER ÄHNLICHE CHEMIKALIEN ZUM REINIGEN VERWENDEN

Reinigen Sie das Produkt mit einem weichen Tuch, das mit einer schwachen Wasserlösung und einem neutralen Reinigungsmittel befeuchtet ist. Tauchen Sie das Tuch in eine Lösung und wringen Sie es aus, bis es fast trocken ist.

4 NICHT SCHÜTTELN, STÖSSE VERMEIDEN

Beim Transport sollte das Produkt vorsichtig und leicht gehandhabt werden. Starke Vibrationen und Kollisionen sind strikt verboten, um Schäden an der Hülle oder den internen elektronischen Komponenten zu vermeiden.




Sicherheitsvorkehrungen

STROMVERSORGUNG

Dieses Produkt kann über Standard-Innenwandsteckdosen mit Strom versorgt werden. Bitte verwenden Sie nur das für dieses Produkt angegebene Stromkabel. Wenn das Produkt nicht verwendet wird, schalten Sie die Stromversorgung aus. Wenn das Produkt längere Zeit nicht verwendet wird, ziehen Sie das Stromkabel aus und bewahren Sie es sicher auf.

110-240V AC outlet

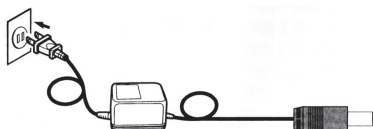

MARKIERUNGSKARTEN

Um sicherzustellen, dass Sie dieses Produkt sicher und korrekt verwenden, um Schäden an den Nutzern und anderen sowie finanzielle Schäden zu vermeiden, sind dieses Handbuch und das Produkt mit einer Reihe von Sicherheitssymbolen versehen. Die verschiedenen Symbole und ihre Bedeutungen sind wie folgt:

WARNUNG

Dieses Zeichen weist darauf hin, dass ein potenzielles Risiko für den Tod oder schwere Verletzungen besteht, wenn dieses Zeichen ignoriert wird und das Produkt falsch behandelt wird.

VORSICHT

Dieses Zeichen weist darauf hin, dass ein potenzielles Gefahr besteht, dass Personen verletzt oder finanzielle Schäden verursacht werden, wenn dieses Zeichen ignoriert wird und das Produkt falsch betrieben wird.

Beispiel für das Logo

Dieses Dreieckssymbol (▲) zeigt an, worauf die Benutzer besonders achten sollten. (Das linke Bild zeigt einen vorsichtigen elektrischen Schock) Ein rundes Symbol (⚡) mit einer schrägen Linie deutet auf Verbote hin. Die Symbole im oder neben dem Logo geben die spezifischen Verbote an. (Keine Demontage ist auf der linken Seite erlaubt.)

Schwarze Punkte (•) weisen auf Maßnahmen hin, die beachtet werden müssen. Die Diagramme in diesem Symbol zeigen die Inhalte der spezifischen Maßnahmen, die beachtet werden müssen. (Das linke Bild zeigt, dass der Netzstecker aus der Steckdose gezogen werden muss.)



Sicherheitsvorkehrungen



Warnung

Rauch, Geruch, Überhitzung

Wenn das Produkt Rauch, unangenehme Gerüche abgibt oder überhitzt, kann die fortgesetzte Nutzung zu Brand- und Stromschlaggefahren führen. In diesem Fall sollten sofort die folgenden Maßnahmen ergriffen werden:

1. Schalten Sie das Gerät aus.
2. Ziehen Sie den Stecker aus der Steckdose.
3. Kontaktieren Sie Ihren Händler.

Stromkabel

Unschlagmäßige Verwendung des Stromkabels kann Brand- und Stromschlaggefahren verursachen. Die folgenden Vorsichtsmaßnahmen müssen beachtet werden:

Verwenden Sie ausschließlich das für dieses Produkt angegebene Stromkabel.

Verwenden Sie eine AC-Stromquelle, deren Ausgangsspannung im Bereich der für den Haushaltsgebrauch vorgesehenen Nennspannung liegt.

Überlasten Sie nicht die Steckdose oder das Stromverlängerungskabel.

Unschlagmäßige Handhabung des Stromkabels kann zu Beschädigungen oder Brüchen führen und Brand- und Stromschlaggefahren verursachen. Die folgenden Vorsichtsmaßnahmen sind zwingend zu beachten:

Legen Sie keine schweren Gegenstände auf das Stromkabel und setzen Sie es nicht hohen Temperaturen aus.

Versuchen Sie nicht, das Stromkabel zu verändern oder übermäßig zu biegen.

Drehen oder ziehen Sie nicht am Stromkabel.

Wenn das Stromkabel oder der Stecker beschädigt ist, ersetzen Sie das Kabel durch ein Kabel mit denselben Spezifikationen und Typen.

Berühren Sie das Stromkabel oder den Stecker nicht mit nassen Händen, da dies ein Stromschlagrisiko darstellt.

Verwenden Sie das Stromkabel an einem Ort, an dem es nicht mit Wasser in Kontakt kommt. Wasser stellt ein Brand- und Stromschlagrisiko dar.



Stellen Sie keine Vasen oder andere Behälter mit Wasser auf das Produkt. Wasser stellt ein Brand- und Stromschlagrisiko dar.



Lassen Sie Minderjährige das Stromkabel oder die Anschlussplatine nicht anfassen oder abziehen, da Minderjährige keine Kenntnisse über Elektrosicherheit haben und ein Stromschlagrisiko besteht.



Hinweise

Unschlagmäßige Verwendung des Stromkabels kann Brand- und Stromschlaggefahren verursachen. Die folgenden Vorsichtsmaßnahmen müssen unbedingt beachtet werden:



Legen Sie das Stromkabel nicht in der Nähe eines Herdes oder einer anderen Wärmequelle ab.



Ziehen Sie nicht am Stromkabel, wenn Sie es aus der Steckdose ziehen. Der Stecker muss fest am Gehäuse gehalten werden.



Der Stecker des Stromkabels muss vollständig in die Steckdose eingesteckt werden.



Vergewissern Sie sich, dass die Stromversorgung ausgeschaltet ist, bevor Sie das Stromkabel anschließen oder abziehen.



Ziehen Sie das Stromkabel bei Gewitter oder vor längeren Abwesenheiten (z. B. bei Reisen) aus der Steckdose.



Ziehen Sie mindestens einmal im Jahr das Stromkabel aus der Steckdose und reinigen Sie den Stecker von angesammeltem Staub.





Sicherheitsvorkehrungen

Entsorgen Sie dieses Produkt nicht



Legen Sie dieses Produkt niemals ins Feuer. Sonst wird es so sein
Verursacht Verbrennungen von Holzprodukten und deren internen elektronischen Bauteilen
Das Produkt kann explodieren und die Gefahr von Bränden und Verletzungen verursachen.

Wasser und Fremdkörper



Wasser, andere Flüssigkeiten und (Metallteile usw.) gelangen hinein.
Bei diesem Produkt besteht Brand- und Stromschlaggefahr. aus
Wenn die obige Situation eintritt, sollten die folgenden Vorgänge sofort ausgeführt werden.

1. Schalten Sie den Strom aus.
2. Wenn Sie das Netzkabel zur Stromversorgung verwenden Um es mit Strom zu versorgen, schließen Sie es an die Steckdose an Ziehen Sie den Stecker heraus.
3. Kontaktieren Sie Ihren Händler

Demontage und Neuaufbau



Zerlegen Sie dieses Produkt niemals in irgendeiner Weise seine Transformation. Andernfalls kann es zu Stromschlägen, Verbrennungen oder Ähnlichem kommen
Es besteht die Gefahr von Personenschäden. Alle internen Inspektionen sollten durchgeführt werden
Überlassen Sie Inspektion, Einstellung und Wartung Ihrem Händler.

Fallengelassen oder getroffen werden



Dieses Produkt wurde fallen gelassen oder starken Stößen ausgesetzt. Die weitere Verwendung nach einer Beschädigung kann zu Brand- und Stromschlaggefahr führen. Wenn die obige Situation eintritt, sollten die folgenden Vorgänge sofort ausgeführt werden.

1. Schalten Sie den Strom aus.
2. Wenn Sie das Netzkabel verwenden Strom, schließen Sie die Steck es aus.
3. Kontaktieren Sie Ihren Händler.

Plastiktüte



Erlauben Sie niemandem, die Plastikverpackung zu entfernen, in der dieses Produkt verpackt ist. Legen Sie den Stoffbeutel auf Ihren Kopf oder stecken Sie ihn in den Mund, da es sonst zu Verletzungen kommen kann Erstickungsgefahr: Familien mit kleinen Kindern sollten sich besonders bewusst sein.
Halten Sie Abstand zu diesem Produkt und stehen Sie auf

Das Hochklettern des



Instrumentenkörpers oder seines Ständers kann dazu führen, dass es umkippt oder Familien mit kleinen Kindern sollten besonders auf das Schadensrisiko achten.

Ort



Stellen Sie dieses Produkt nicht auf unebenen Oberflächen auf Oberfläche oder einem anderen instabilen Ort. Sonst wird es so sein
Beim Herunterfallen des Produkts besteht Verletzungsgefahr.

Produktbewegung



Bevor Sie dieses Produkt bewegen, müssen Sie es zunächst von der Wand entfernen Ziehen Sie das Netzkabel aus der Steckdose und ziehen Sie alle anderen Geräte ab Kabel und Verbindungsdrähte. Andernfalls kann die Leitung beschädigt werden, was zur Folge hat Brand- und Stromschlaggefahr.

Sauber



Bevor Sie dieses Produkt reinigen, müssen Sie es zuerst entfernen Ziehen Sie das Netzkabel aus der Steckdose, da es sonst zu einem Brand kommen kann Es besteht Katastrophen- und Stromschlaggefahr.

Schnittstelle



An die Schnittstelle dieses Produkts können nur bestimmte Geräte angeschlossen werden. Ausrüstung und Geräte. Der Anschluss unbeabsichtigter Geräte oder Geräte kann zu Problemen führen kann zu Bränden und Stromschlägen führen.

Standortauswahl



Stellen Sie dieses Produkt nicht an den folgenden Orten auf.
NEIN Es besteht Brand- und Stromschlaggefahr.
Orte mit hoher Temperatur oder Staub.
Küche oder andere Orte mit Dämpfen.
Orte mit direkter Sonneneinstrahlung oder anderen Orten Wo dieses Produkt hohe Temperaturen erzeugt.

Volumen



Spielen Sie Musik niemals über einen längeren Zeitraum mit hoher Lautstärke ab. verwenden
Seien Sie besonders vorsichtig, wenn Sie Kopfhörer verwenden, da eine zu hohe Lautstärke Ihr Gehör schädigen kann.

Schwere Gegenstände



Stellen Sie niemals schwere Gegenstände auf dieses Produkt. Andernfalls wird das Produkt beschädigt Die Oberseite des Produkts ist zu schwer, sodass das Produkt umkippt oder auf Gegenstände fällt. Beim Herunterfallen des Produkts besteht Verletzungsgefahr.

Fachgerechte Montage des Ständers



Eine unsachgemäße Montage des Ständers kann zum Umkippen des Produkts führen Beim Herunterfallen des Produkts besteht Verletzungsgefahr. Deshalb muss es Um dies zu gewährleisten, muss der Zusammenbau gemäß den Anweisungen im beiliegenden Handbuch erfolgen Es wird garantiert, dass dieses Produkt ordnungsgemäß in seiner Halterung installiert ist.

Sicherungswechsel



Wenn die Sicherung durchbrennt, liegt möglicherweise ein Kurzschluss im Inneren des Produkts vor. Bei Störungen im Stromkreis oder bei Spannungsinstabilität ist es notwendig, einen Fachmann zu konsultieren Identifizieren und ersetzen Sie es, andernfalls besteht Brand- und Stromschlaggefahr.



Précautions de sécurité

Ne jetez pas ce produit

Ne placez jamais ce produit au feu. Sinon ce sera Provoque la combustion des produits en bois et de leurs composants électroniques internes
Le produit peut exploser, entraînant un risque d'incendie et de blessures.



Eau et corps étrangers

De l'eau, d'autres liquides et (morceaux métalliques, etc.) entrent Ce produit présente un risque d'incendie et de choc électrique. dehors Lorsque la situation ci-dessus se produit, les opérations suivantes doivent être effectuées immédiatement.

1. Coupez l'alimentation.
2. Si vous utilisez le cordon d'alimentation pour alimenter l'alimentation, branchez-le à la prise murale Débrancher.
3. Contactez votre revendeur



Démantèlement et reconstruction

Ne démontez jamais ce produit de quelque manière que ce soit ou sa transformation. Sinon, un choc électrique, des brûlures ou autres Cela risque de provoquer des blessures. Toutes les inspections internes doivent être Confiez l'inspection, le réglage et l'entretien à votre revendeur.



Tombé ou frappé

Ce produit est tombé ou a été soumis à un fort impact. Continuer à l'utiliser après un dommage peut entraîner des risques d'incendie et de choc électrique. Lorsque la situation ci-dessus se produit, les opérations suivantes doivent être effectuées immédiatement.

1. Coupez l'alimentation.
2. Si vous utilisez le cordon d'alimentation pour l'alimentation, connectez le Débranchez-le.
3. Contactez votre revendeur.



Sac plastique

Ne laissez jamais personne retirer l'emballage en plastique utilisé pour emballer ce produit. Mettez le sac de matériel sur votre tête ou mettez-le dans votre bouche, sinon cela pourrait provoquer Risques d'étouffement Les familles avec de jeunes enfants doivent être particulièrement vigilantes

Gardez vos distances avec ce produit et tenez-vous debout



Grimper sur le corps de

l'instrument ou sur son support peut le faire basculer ou Les familles avec de jeunes enfants doivent accorder une attention particulière aux risques de dommages.



Lieu

Évitez de placer ce produit sur des surfaces inégales surface ou tout autre endroit instable. Sinon ce sera Si le produit tombe, il existe un risque de



Mouvement du produit

Avant de déplacer ce produit, vous devez d'abord le retirer du mur Débranchez le cordon d'alimentation de la prise électrique et débranchez tous les autres Câbles et fils de connexion. Sinon, la ligne pourrait être endommagée, ce qui entraînerait Risque d'incendie et de choc électrique.



Faire le ménage

Avant de nettoyer ce produit, vous devez d'abord retirer le Débranchez le cordon d'alimentation de la prise de courant, sinon cela pourrait provoquer un incendie Risque de catastrophe et de choc électrique.



Interface

Seuls les appareils spécifiés peuvent être connectés à l'interface de ce produit. Équipements et appareils. La connexion d'équipements ou de dispositifs involontaires peut provoquer peut provoquer des risques d'incendie et de choc électrique.



Sélection de l'emplacement

Évitez de placer ce produit aux endroits suivants. Non Il existe un risque d'incendie et de choc électrique. Endroits à haute température ou poussières. Cuisine ou autres endroits avec des fumées. Endroits exposés à la lumière directe du soleil ou à tout autre Où ce produit génère des températures élevées.



Volume

Ne jouez jamais de musique à volume élevé pendant de longues périodes. utiliser Soyez particulièrement prudent lorsque vous utilisez des écouteurs, car un volume excessif peut endommager votre



Objets lourds

Ne placez jamais d'objets lourds sur ce produit. Sinon, le produit Le dessus du produit est trop lourd, ce qui fait basculer le produit ou le laisse tomber sur des objets. Si le produit tombe, il existe un risque de blessure.



Assemblage correct du stand

Un assemblage incorrect du support peut le faire basculer, ce qui entraînerait le produit à Si le produit tombe, il existe un risque de blessure. Il faut donc Il doit être assemblé conformément aux instructions du manuel qui l'accompagne pour garantir que Ce produit est garanti correctement installé dans son support.



Remplacement du fusible

Si le fusible saute, il peut y avoir un court-circuit à l'intérieur du produit. phénomène de circuit, ou instabilité de tension, il est nécessaire de consulter un professionnel Identifiez-le et remplacez-le, sinon il y a un risque d'incendie et de choc électrique.





Safety Precautions

Do not dispose of this product

Do not place this product in fire. Otherwise, the wooden products will burn and their internal electronic components will explode, posing a risk of fire and personal injury.

Water and foreign matter

Water, other liquids and (metal pieces, etc.) entering this product may cause fire and electric shock. When the above situation occurs, the following operations should be performed immediately.

1. Turn off the power.
2. If the power cord is being used for power, unplug it from the wall outlet.
3. Contact your dealer.

Dismantling and rebuilding

Do not disassemble or modify this product in any way. Otherwise, there is a risk of electric shock, burns or other personal injuries. Entrust all internal inspections, adjustments and maintenance to your dealer.

Dropped or hit

Continuing to use this product after it has been dropped or damaged by a strong impact may cause fire and electric shock. When the above situation occurs, the following operations should be performed immediately.

1. Turn off the power.
2. If the power cord is being used for power, unplug it from the wall outlet.
3. Contact your dealer.

Plastic bag

Do not let anyone put the plastic bag used to package this product over their head or put it in their mouth, otherwise there is a risk of suffocation. Families with young children should pay special attention.

Keep your distance from this product and stand

Climbing up the piano body or its stand may cause it to tip over or be damaged. Families with young children should pay special attention.

Laying

Avoid placing this product on uneven surfaces or any other unstable location. This may cause the product to fall and cause personal injury.



Product movement

Before moving this product, you must unplug the power cord from the wall outlet and disconnect all other cables and cords. Otherwise, the wire may be damaged, resulting in the risk of fire and electric shock.



Clean

Before cleaning this product, you must unplug the power cord from the wall outlet, otherwise there is a risk of fire and electric shock.



Interface

Only specified equipment and devices may be connected to the interfaces of this product. Connecting unspecified equipment or devices may cause fire and electric shock hazards.



Location Selection

Avoid placing this product in the following places.

Otherwise, there is a risk of fire and electric shock.

Places with high temperature or dust.

Kitchen or other places with fumes.

Places exposed to direct sunlight or any other place where this product will generate high temperatures.



Volume

Do not play music at high volume for a long time. Be especially aware when using headphones that excessive volume can damage your hearing.



Heavy objects

Do not place heavy objects on this product. Otherwise, the top of the product will be too heavy, causing the product to tip over or the objects on it to fall, posing a risk of personal injury.



Proper assembly of the stand

Improper assembly of the stand may cause it to tip over, causing the product to fall, posing a risk of personal injury. Therefore, assembly must be carried out according to the instructions in the instructions provided with it to ensure that this product is properly installed on its stand.



Fuse replacement

If the fuse is blown, there may be a short circuit or unstable voltage inside the product, which must be identified and replaced by professionals, otherwise there is a risk of fire and electric shock.

